

How to operate the Remote Control



Remote Control

Button 1 : Aluvator starts lifting with the level system. After a set period of time (depending on the type of boat) the control unit switches itself off.

Button 2 : Aluvator goes down with the level system. After a set period of time (depending on the type of boat) the control unit switches itself off.

EMERGENCY STOP

Press button 1 and immediately after press button 2
The control unit immediately stops.

Reset EMERGENCY STOP

Press button 1 and immediately after, hold button 2 for 3 seconds.
The control unit will reset. After resetting the control unit works again as described above.